

CLR 0011 - ADJUSTABLE LOADING RAMP

ERECTION INSTRUCTIONS

1. Site ramp on flat level surface.
2. Connect small hoop to ramp base, using 2 x M12 x 90mm bolts with Nylock nuts.
3. Connect 1 side panel (strip on outside) small hoop with M10 x 75mm bolts and nuts, then connect large hoop to this panel.
4. Fit second side panel.
5. Fit lower side panels to hoops with M10 x 75mm bolts and nuts.
6. Pass stabiliser bar through the sleeves on the bottom of the large hoop for added stability. Pass M10 x 75mm bolts through holes in sleeve.
7. Pass height adjustment bar through side brackets of large hoop and set at desired height.
8. Tighten all bolts and nuts fully.
9. Fit optional gate on small hoop – (If Ordered)

Note: Assembly requires 2 people Do not tighten any bolts until each section is completed

SAFETY WARNING

Livestock handling can be dangerous only experienced operator should use this product. Do not use ramp with gaps in the base. Timber will shrink with age, fit spare timber when required.

Packing List

Ramp base x 1	Adjuster bar x 1
Ramp upper sides x 2	M10 x 75mm bolts and nuts x 24
Ramp lower sides x 2	M12 x 90mm bolts only x 2
Large hoop x 1	M12 Nylock nuts x 2
Small hoop x 1	100 x 50 OB timber – 26 @ 740mm
Stabiliser bar x 1	100 x 50 OB timber – 11 @ 655 (inc 2 spares)