



## **INSTRUCTIONS FOR STEER PORTABLE SHEEP LOADING RAMP YARDS**

### **Unpacking Instructions**

The unit is shipped with all panels strapped for security, remove and discard.

Check unit for any transport damage and report to supplier immediately.

Under the front crossmember there are two M12 nuts that secure the swivel tongues for transport. Before the unit can be lowered these need to be removed. Retain for use later when moving from one site to another.

### **Sheepyard Operation**

1. Remove panels and set in desired configuration for working yard. (Refer to layout plans as a guide for set up).
2. With panels roughly in place push the mobile drafting race into the working position.
3. To lower race to ground level pull the bolts out of the swivel tongue plates at the front of the 'A' frame and push clear.
4. Before raising the 'A' frame, ensure the prop located at the axle is pinned in place; to prevent the prop from slipping down, whilst raising 'A' frame.
5. When the 'A' frame is lifted into the upright position; release pin holding the prop and slide into the sleeve and pin to secure in position.
6. Go to the rear of drafting race and release the winch cable. Pull the cable up and over the nylon roller on top of the 'A' frame and down to the cleat, located at the front of the ramp base. Attach hook to this cleat.
7. Winch ramp base up to the desired loading height. When satisfied with height swing the telescopic props on side of ramp down and slide to required length, pin in position, and connect to bolts located on side of base.
8. When secure release the winch cable and remove hook from front cleat and wind up. Make sure the cable is clear of the working area.
9. Attach panels to race in desired position and yard is ready to use. (Reverse procedure for packaging into transport mode).

Further information may be found at [www.steeraust.com.au](http://www.steeraust.com.au)

### **SAFETY WARNING**

**Do not use the winch supplied for lifting people it is not to be used for any other purpose except as per instructions above.**

**Capacity 272kgs and is not designed to exceed this weight. Manufacturer separately warrants winch**

Web site [www.steeraust.com.au](http://www.steeraust.com.au) Telephone 03 9357 9800

LAY OUTS FOR PORTABLE SHEEP YARDS

